






ATTENTION
Read this first.


Due to the difference of the quality of water supply in every area, some debris or dirt could be left in the valve unit inlet causing the timer to stop working. Please ensure the water from the tap is clean before proceeding.

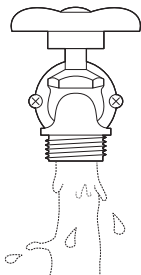


- 1** Remove the batteries and disconnect the **Valve Unit** from the **Control Unit**. Check the filter washer for any debris. If there is debris, remove the filter washer and rinse it with clean water.

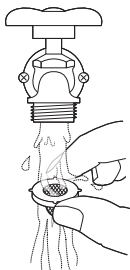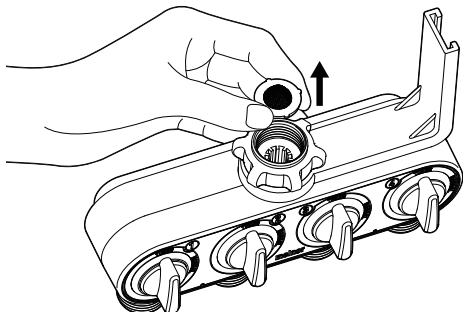

- 2** Use a high pressure water spray to clean each inlet. Put the filter washer back and reconnect the **Valve Unit** to the **Control Unit**.

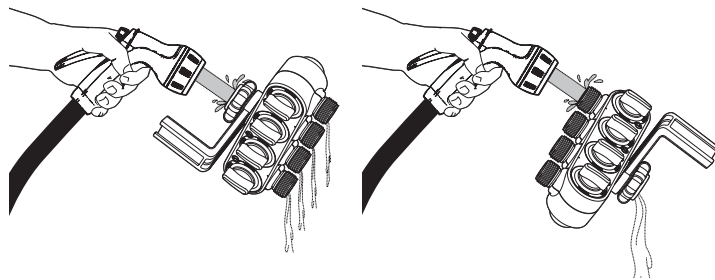

NOTE: Remember, it is important to connect the **Valve Unit** to the **Control Unit** before installing batteries.

- 3** If problems persist, activate Manual watering using the **MANUAL** button . Open and close each affected valve 3 times before returning to **AUTO** mode.

