


63280

## Four-Zone Electronic Water Timer

User Instructions ■ English

63280\_INS\_ENG\_04

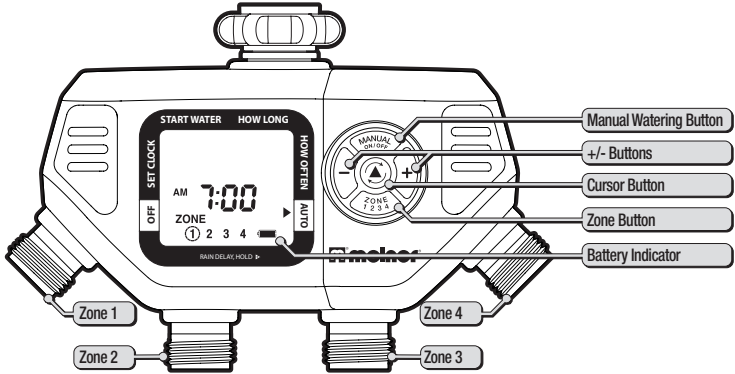

### 1 Understanding Zones

This is a four zone timer allowing you to water four different areas from the same faucet.

### 2 Battery Installation & Assembly

Remove the battery holder from the back of the **Timer Control Unit**. Insert two AA alkaline batteries (Do not use rechargeable batteries) as indicated on the battery holder. Replace the battery holder, making sure that it is firmly and securely placed in the **Timer Control Unit**.

**NOTE:** Do not use your timer when the air temperature is below 40°F (4.5° C). When storing your timer, be sure it is in a dry place and protected from frost.



We recommend replacing batteries when the indicator reaches



#### Installation of the Timer

Attach the timer to an outside faucet and slowly turn on the water. The water must be left on while the timer is attached to the faucet for your timer to operate.

**NOTE:** You may choose to program your timer before or after attaching it to the faucet.

### 3 SETTING THE CLOCK

Touch any button to wake the timer.

Using the button, move the arrow to **SET CLOCK**.

Press the & buttons to adjust the clock to the current time.

Press the button again to set the time and move to the next setting, **START WATER**.



### 4 SELECT WHEN TO WATER

With the arrow pointing to **START WATER**, use the & buttons to select the first time of the day you want to water. All remaining watering cycles during the day will be based on this time.

Press the button to move to the next setting.

**Note:** You will see **Zone 1** highlighted at the bottom of the screen; program Zone 1 before moving on to Zone 2.



### 5 SELECT HOW LONG TO WATER

With the arrow pointing to **HOW LONG**, use the & buttons to select the length of each watering cycle.

Cycles can be up to **360 minutes (6 hours)** in duration.

Press the button to move to the next setting.



### 6 SELECT HOW OFTEN TO WATER

With the arrow pointing to **HOW OFTEN**, use the & buttons to select the watering frequency.

Watering can be as often as **Every 1 Hour** or little as **Every 7 Days (once per week)**.



EVERY 1 DAY							
EVERY WEEK	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
	●	●	●	●	●	●	●
EVERY 2 DAY							
WEEK ONE	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
		●		●		●	
WEEK TWO	●		●		●		●
EVERY 3 DAY							
WEEK ONE	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
		●			●		
WEEK TWO	●			●			●

### 7 SETTING ANOTHER ZONE

When you have set **START WATER**, **HOW LONG** and **HOW OFTEN** for Zone 1, press the button to go back to **START WATER**.

Press to select Zone 2, and repeat steps 4-6 above.

When all desired zones are set, press the button to enter **AUTO** mode.



### 8 AUTO MODE

After programming, the timer will be in **AUTO** mode.

The screen display will alternate between showing the current time and the next watering cycle of each zone.

If the next watering cycle is more than 24 hours away, the **NEXT START TIME** will be displayed in days instead showing a time.





## 9 RAIN DELAY MODE

If there is rain in the forecast, you can temporarily suspend your watering program on all zones for up to 7 days using the **RAIN DELAY** feature.

**RAIN DELAY** mode will stop all watering for up to 7 days.


After the selected delay has ended, your watering program will automatically resume.

To activate **RAIN DELAY** mode, make certain the arrow is pointing to **AUTO**. Press the  key to select the delay period. You can reduce the delay period with the  key.

In **RAIN DELAY** mode, the screen will toggle between the current **TIME** and the remaining **DELAY** time. If the delay is greater than 12 hours, the **DELAY** will be shown in **DAYS**.




## 10 OFF MODE

If you wish to stop watering for an extended period, push the  button until the arrow is pointing to **OFF**.

The timer will not water automatically while in this mode. The screen will display the word **OFF** in large letters.


To start watering automatically again, simply press the  button until the arrow is pointing to **AUTO**. The program will begin watering at the next available **Start Time**.

**Note:** Watering will be stopped for all zones when this feature is activated.

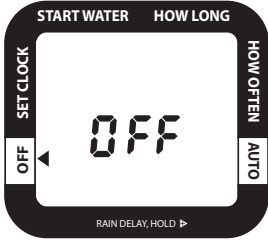

## 11 MANUAL WATERING

 
To use a hose or other watering tool, simply press the  button. Then use the  button to select which zone you want to use.

Using the  button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached.

To quit the manual function, press the  button again.



## 12 TIMER RESET

If you need to completely erase all settings in the timer and return it to its original state, press and hold the  button for 7 seconds.

The screen will display **RESET**.

**NOTE:** All programming will be lost when the timer is **RESET**.



## USEFUL TIPS

### Open Valves During Installation

Shaking during transportation can cause valves to be open. If this occurs, water may run continuously through one or more valves during installation.


Turn the water off.

Remove the batteries. Wait for the screen to go blank. Reinsert the batteries.

**Note:** Removing the batteries will not erase any existing watering schedules.

Turn the water back on.


If the problem persists, turn off the water. Use the **Manual** feature to open and close each valve 3 times.

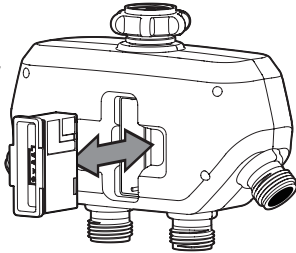


### Cleaning Your Timer

You should clean your timer periodically. Debris or sediments commonly found in water can build up in your timer.

Turn off the water. Remove the timer from the faucet and check that the filter washer is clear. If you notice any debris, remove the filter washer and clean it out with water.

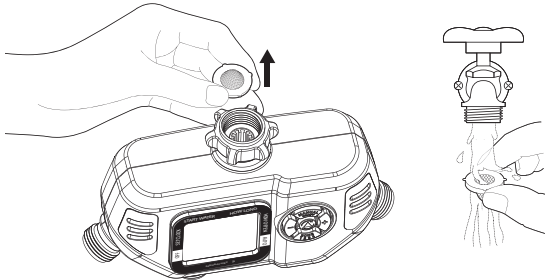

Activate the **MANUAL** mode by pressing the **MANUAL** button. Open all of the valves and spray water through each valve and the faucet connection to flush out any built-up sediments or debris.

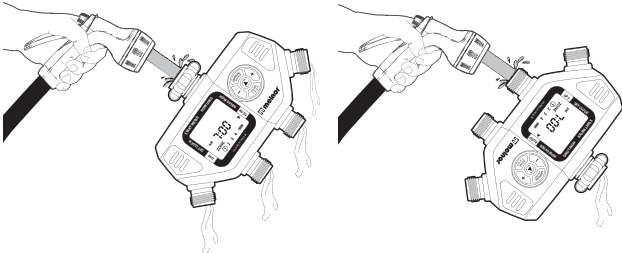


### Seasonal Storage

Freezing temperatures can cause water in the timer to freeze and expand, damaging the timer.

At the end of the season or when there is frost in the forecast, turn off the water and remove your timer from the faucet.

Remove the batteries.

Be sure to store the timer indoors, away from freezing temperatures.

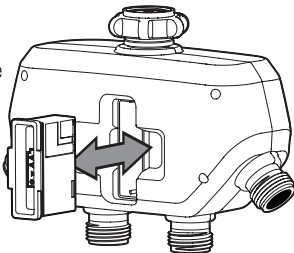

### Tips for Battery Life

Make sure to use fresh alkaline batteries.

Do not use rechargeable batteries.

Remove the batteries at the end of the season before storing.

Batteries should last about one season. A schedule with more frequent watering times can cause the batteries to drain faster.



**Warning:** Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures.